
Emergency Response Guide

- 1.	RESCUE INFORMATION	
	Rescue Card Information	.2
	Vehicle Basic Information	.3
	Safety Sign Information	.4
	Disconnecting 12 V Battery	.6
	High Voltage Power Release Method	.6
	Disconnecting Charging	6

1-2.	EMERGENCY HANDLING PROCEDURE INFORMATION
	Parking Operations7
	Vehicle Power-off7
	Back Door Emergency Opening8
	Protection Device Required for Rescuer8
	Emergency Rescue9
	Towing Vehicle12

1-1. RESCUE INFORMATION

Rescue Card Information

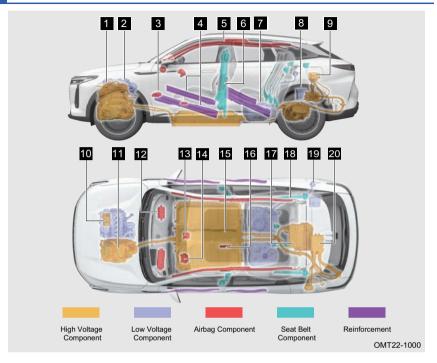

- High Voltage Electric Engine Assembly Heater
- 3 Driver Knee Airbag (If Equipped)
- 4 Door Anti-collision 5 Curtain Side Airbag Panel
- 6 Front Seat Belt

- 7 Fuel Tank
- 8 12 V Battery
- 9 Charging Port

- Electric Compr Assembly
 - Compressor Hybrid Transmission Pront Assembly Airbag
 - 12 Front Passenger Airbag

- 13 Airbag Module
- 14 Driver Airbag
- 15 Power Battery18 Rear Seat Belt

- Front Seat Cente Airbag (If Equipped)
- Center **12** Rear Drive Motor ped)
- Fuel Filler
 On-board
 Charger
 Assembly

↑ WARNING

- In case of traffic accident, do not touch high voltage component and high voltage wire harness in the illustration to avoid serious injury or even death.
- When cutting the vehicle for rescue, avoid the components in the illustration and the rescuer must wear basic rescue protective device. Select high voltage rescue protective device or fire rescue protective device according to the site situation. Failure to follow the instructions may cause personal injury or even death.


Vehicle Basic Information

Overall Size	Length (mm)	4775	
	Width (mm)	1920	
	Height (mm)	1671	
Wheel Base (mm)		2800	
Manufacturer Maximum Total Weight (kg)		2365	2609
Seating Capacity (- Including Driver) (Person)		Ę	5

	Туре	Lithium ion battery
Battery cells	Monomer nominal voltage (V)	3.66
Power battery assembly	Battery pack rated capacity (Ah)	55 (2WD) 107 (AWD)
	Battery pack nominal voltage (V)	322.08 (AWD) 353.28 (2WD)
	Number of battery pack (pieces)	1
Fuel tank capacity (L)	70	

Safety Sign Information

Warning Sign Name	Warning Sign Pattern	Warning Sign Description
High Voltage Warning Sign 1	人 高压 改版 库 糖 區 函	Never touch high voltage system components. Never depress! Danger!
High Voltage Warning Sign 2	A Z	High voltage system components, be careful, Danger! Never touch high voltage system components without wearing protection device, beware of electric shock!
High Voltage Warning Sign 3		High voltage system components, be careful, Danger! Never touch high voltage system components without wearing protection device, beware of electric shock and high temperature scald!
High Voltage Warning Sign 4	WARNING!HIGH VOLTGAGE 高压警告!	High voltage system components, be careful, Danger! Never touch high voltage system components without wearing protection device, beware of electric shock and high temperature scald!
High Voltage Warning Sign 5	学り触电 Warning Electric Shock 当心高温表面 Warning hot surface Mering for tsurface Mering	High voltage system components, be careful, Danger! Never touch high voltage system components without wearing protection device, beware of electric shock and high temperature scald!

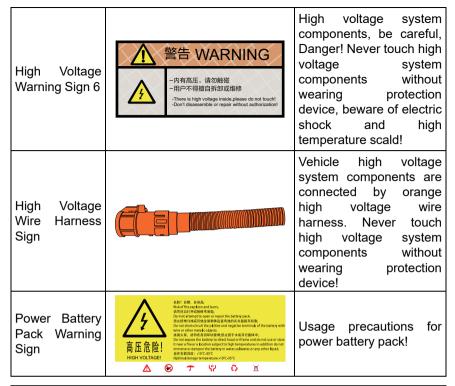

↑ WARNING

- After vehicle is started, power system will be hot. Be careful of high voltage and high temperature, and always follow the instructions on the vehicle safety warning signs.
- Never touch, remove or replace parts with high voltage warning marks, orange cables and connectors on vehicle to prevent high voltage electric shock.
- Not every high voltage component is labeled. Rescuer must wear basic rescue protective device when cutting a vehicle. Select high voltage rescue protective device or fire protective device according to the site situation.
 Failure to follow the instructions may cause personal injury or even death.

Disconnecting 12 V Battery




- 1. Power off the vehicle;
- 2. Open the back door, and remove the right protector;
- 3. Disconnect the negative battery cable.

High Voltage Power Release Method



- 1. Power off the vehicle;
- 2. Disconnect the negative battery cable;
- Remove front compartment fuse box cover, refer to fuse location diagram on fuse box cover, pull BMS fuse out by a fuse remover and disconnect the BMS module power.

Disconnecting Charging Gun

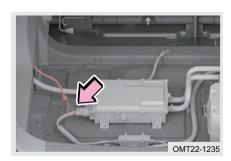

- If charging gun cannot be unplugged from AC charging port by pressing and holding the upper button of charging gun, it can be released manually by using the cable.
- Make sure that the vehicle is not charged at present according to charging information displayed on instrument cluster;
- 2. Open the back door and lift the luggage compartment carpet;
- 3. Pull charging gun release cable to release charging gun manually.

1-2. EMERGENCY HANDLING PROCEDURE INFORMATION

Parking Operations



Depress brake pedal, and park the vehicle smoothly. Press P button to shift the gear position to P, "(P)" red indicator on instrument cluster remains on, indicating that parking function is activated.

Vehicle Power-off

Normal power-off

With vehicle in READY and gear position in P, the driver door is opened, the driver gets up and leaves the driver seat, "READY" indicator on instrument cluster goes off, the vehicle exits "ready to drive" state.

With the vehicle power-on or in READY, if the driver seat is not occupied, all four doors are closed, and gear position is in P, the following operations will power off the vehicle:

- · Lock and power off the vehicle with NFC card key (if equipped).
- · Lock and power off the vehicle with smart key.

Power-off switch

When the vehicle is in a stationary state for a long time, perform power-off through the power-off switch in the head unit display to reduce the loss of vehicle energy consumption.




When the vehicle is in a stationary state and the shift position is in P/N, press the power-off switch and confirm to turn off power supply of the vehicle according to the hints on head unit, the vehicle is powered off.

Automatic power-off

With vehicle powered on, driver seat not occupied, four doors closed, and gear position in P, the vehicle is powered off automatically after parking for about 90 minutes.

Back Door Emergency Opening

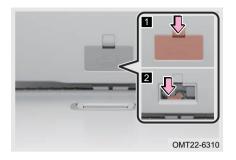

- Get in the rear of vehicle and open emergency device cover;
- Press the emergency device switch with hand, release it, and then push the back door to open it.

Protection Device Required for Rescuer



Basic Rescue Protection Device:

High Resistance Safety Work Shoes 2 Cotton Gloves

3 Protective Gloves

High Voltage Rescue Protection Device:

4 High Voltage Power Specialist Protective Clothing

5 Rubber Sheet

Safety Helmet with Goggles

Fire Rescue Protection Device:

Compressed Air Breathing Mask

Thermal Imaging Camera

↑ WARNING

Rescuer must wear basic rescue protective device. Select high voltage rescue protective device or fire rescue protective device according to the site situation. Failure to follow the instructions may cause personal injury or even death.

Emergency Rescue



WARNING

When the vehicle needs emergency rescue, be sure to inform the rescuer that the vehicle is equipped with power battery, and please transfer the rescue information manual to rescuer.

How to avoid water intrusion into high voltage components

- When a vehicle is flooded, first pull the vehicle out of the water and then cut off the high voltage power supply to avoid greater electric shock hazard due to vehicle immersion.
- 2. When washing the vehicle, avoid washing the charging port cover switch area with a high pressure water gun, otherwise it may cause the charging port cover to open and cause water to enter the charging port end.
- 3. Do not charge when there are obvious water stains in the charging port to avoid damage to the vehicle or charging device; When charging the vehicle, do not wash the charging port area to avoid damage to the vehicle or charging device.
- 4. Do not wipe the door protective panel with wet tissue, wet cloth, detergent etc. Pay attention to protection during the use of vehicle (such as on rainy days, washing vehicle) and try to avoid water intrusion into the door protective panel, otherwise it may cause internal electrical component fault etc.
- 5. Try to choose a place with a shelter for charging in the severe convective weather; If the vehicle is soaked in water or wading level is above the doorsill position, it may cause water to enter into the high pressure components. It is necessary to contact authorized service station for proper test and treatment in time; Never drive on a road when water exceeds half of the tires.
- 6. Try not to drive on a road with unknown depth of water to avoid leakage accidents or damage to high voltage electrical components; If wading is necessary, analyze the road condition and confirm the depth of water before driving, and the water depth should not be higher than the bottom of the body; It is recommended not to stay in deep water for a long time during wading, otherwise vehicle high voltage components may be damaged.

Driving in wade

- When vehicle drives in wade:
- 1. If you cannot drive the vehicle away from the waterlogged area, please cut off power supply immediately.
- 2. When driving in wade, do not stop the vehicle and keep driving at low speed (vehicle speed cannot exceed 10 km/h).
- 3. Drive the vehicle away from the waterlogged area and park it in a safe area. Check if there is any water in the vehicle, and clean it if there is.
- After vehicle drives in wade:
- 1. If the vehicle is severely flooded, all persons in the vehicle must evacuate to a safe area immediately.
- 2. After the vehicle drives in wade, slightly depress the brake pedal several times to remove any residual water from the brake disc and ensure that the brake system can work properly.
- 3. Go to authorized service station for routine inspection as soon as possible, as water may enter into components of the drive train system and dilute the grease, causing system malfunction when vehicle drives in wade.

Fire prevention

- In order to prevent vehicle fires effectively, pay attention to the following precautions during usage:
- 1. Do not leave flammable and explosive materials in the vehicle.

In hot summer, the internal temperature of the vehicle parked in the sun can reach more than 70° C. If lighters, cleaner, perfume and other flammable and explosive materials are left in the vehicle, it is very easy to cause fire or even explosion.

- 2. After smoking, make sure that the cigarette butt is completely extinguished. Smoking is not only harmful to health, but also may cause fires. If the cigarette butt is not completely extinguished, it may cause a fire.
- 3. It is recommended to regularly go to authorized service station for inspection.

Check the engine compartment for oil leakage regularly and clean any oil stain or oil on the engine in time.

Check regularly if vehicle circuits, electrical appliances and wire harness connectors, insulation and fixing position are normal. If any problem is found, handle it in time.

- 4. Do not modify vehicle circuits or add electrical components.
 - a. It is strictly prohibited to use fuses or other metal wires that exceed the rated specifications of electrical appliances to replace fuses.

b. Installation of other electrical appliances (such as high power audio and light) can cause excessive load on circuits, and wire harness is prone to heating, causing fires. Improper modification of electrical appliances and circuits can create contact resistance and abnormal heating, causing fires.

5. Precautions for driving.

When parking the vehicle, especially in summer, it is important to check underneath for flammable substances, such as hay, dead branches and leaves, or wheat straw. If there are flammable substances under the vehicle, it is very likely to cause fires. When driving, the vehicle should also avoid roads covered with flammable materials such as dry leaves, wheat straw and weed etc. as much as possible, or stop vehicle in time to check underneath for flammable materials after passing through such roads. When parking, try to avoid areas exposed to sunlight as much as possible.

Always leave portable fire extinguishers in the vehicle and master the usage methods.

To ensure vehicle safety, fire extinguishers should be equipped in the vehicle and regularly inspected and replaced; At the same time, it is important to be familiar with the usage of fire extinguishers and be prepared to avoid being helpless in case of accidents.

7. When repairing or maintaining a vehicle, it is necessary to disconnect the 12 V battery power after the vehicle high voltage power is cut off.

Fire treatment

- If the vehicle is on fire, take effective measures promptly and calmly to minimize losses:
- 1. After the accident occurs, contact the insurance company for post-treatment in time.
- After the fire department extinguishes the fire, ask for a police certificate and a statement of the fire cause.
- Call 119 to report to the police in time, at the same time, call the reporting phone number of the insured insurance company and request the insurance company for on-site treatment.
- 4. Generally, a fire has early warning signs (such as abnormal noise or odor from body). Once abnormal conditions are found, stop the vehicle and power off in time, and carry out active rescue according to the actual situation.
- 5. If smoke is found in the front compartment, do not open the front compartment cover immediately (As doing so will intensify the combustion and spread of the fire due to a large amount of air. Because the combustion material in the front compartment is limited, closing the front compartment cover can control the slow burning of the fire, which is conducive to extinguishing it).

6. If fire occurs, leave the dangerous area immediately and call the fire telephone. Be sure to inform the rescuers that this is a hybrid vehicle, and deliver the onboard rescue information manual to the rescuers.

⚠ WARNING

When fire occurs, never touch any part of vehicle directly. Keep away from the vehicle and wait for professional rescuers wearing appropriate protective device to operate it.

Power battery leakage

If power battery leaks, leave the dangerous area immediately and call the fire telephone. Be sure to inform the rescuers that this is a hybrid vehicle, and deliver the onboard rescue information manual to the rescuers.

⚠ WARNING

High voltage battery liquid leakage caused by collision can only be operated by professional rescuers who wear protective mask and solvent-isolation gloves. Do not touch liquid directly.

Vehicle cutting area

Vehicle pillar uses cast aluminum alloy to protect personal safety. If it is necessary to cut during rescue, proper tools should be used. It is forbidden to cut the high temperature and high voltage areas of the vehicle.

MARNING

When cutting the vehicle, professional rescuers must use appropriate tools such as hydraulic cutter etc. and wear appropriate personal protective device to avoid serious personal injuries.


Towing Vehicle

If the vehicle needs to be towed, it is recommended to contact authorized service station or professional towing services department, or ask for help from the roadside rescue service organization you have joined.

↑ WARNING

- Damage caused by transportation is not covered by the warranty.
- To transport the vehicle, follow the instructions below strictly.
- Do not tow your vehicle only with ropes or chains by other vehicles.

Using platform trailer

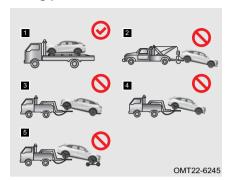

Please use **1** platform rescue vehicle to load your vehicle.

Vehicle towing precautions are as follow:

- Tow with four wheels off ground. Do not use the rescue method **2 3 4 5** shown in the figure.
- Before towing, shift the gear position to N, turn on hazard light, and close the doors.
- During towing, nobody is allowed to seat in the accident vehicle.



CAUTION

Do not move the vehicle with forklift when vehicle is broken down.

⚠ WARNING

- No person or object is allowed behind the trailer when the vehicle is pulled onto the platform rescue vehicle, otherwise it may cause personal injury or death.
- The vehicle can only be towed away from the site if there is no safety risk. If the vehicle power battery pack has deformation, leakage, smoke, etc., the safety risk should be solved first.